


SuperpanelPRO 30 and UltrapanelPRO 30 instructions

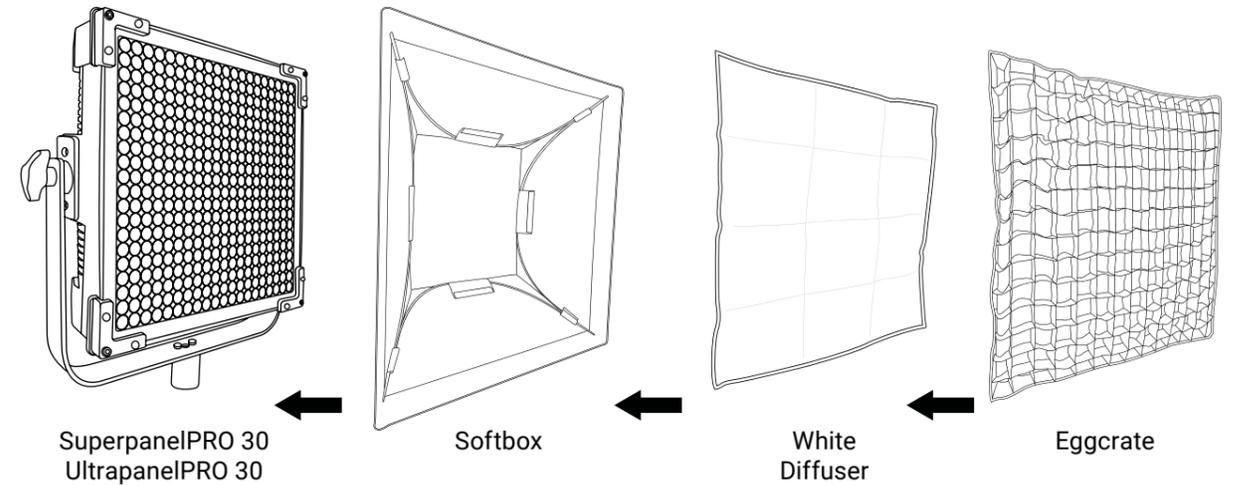

To use the softbox, open the velcro string at the edges of the panel and make sure to tighten it. (fig 1)

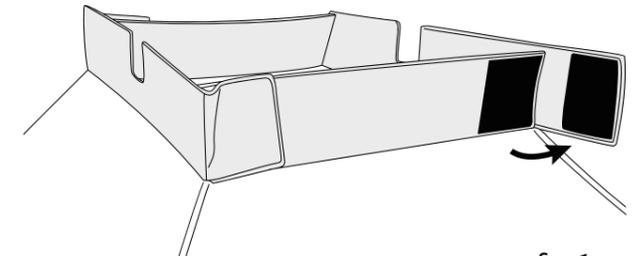


fig. 1

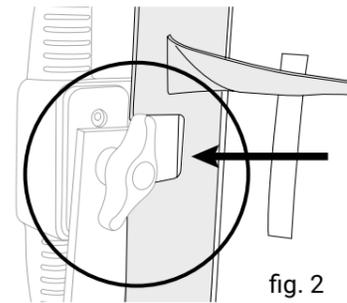


fig. 2

⚠ Attention: please note this is the right way to mount the softbox on the SuperpanelPRO 30 or the UltrapanelPRO 30. (fig 2)

Please use the strap on the back to secure the softbox to the panel. (fig. 3)

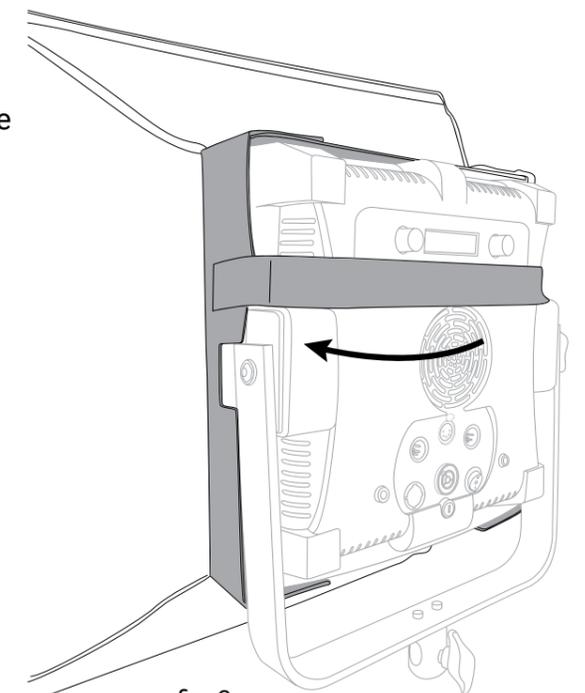
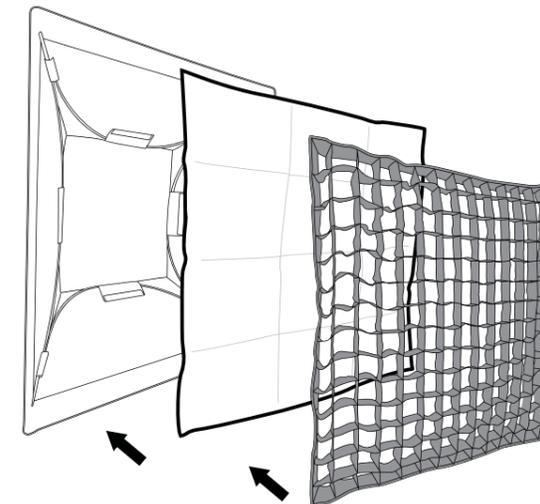


fig. 3

User Manual

SOFTBOX

UltrapanelPRO 30 - SuperpanelPRO 30

UltrapanelPRO 60 - SuperpanelPRO 60

DayledPRO 650 / 1000 / 2000 / 3000

SuperpanelPRO 60 and UltranelPRO 60 instructions

Install the softbox on the SuperpanelPRO 60 and the UltranelPRO 60.

The black velcro string goes to the back of the panel to secure tightly the softbox. (fig 1)

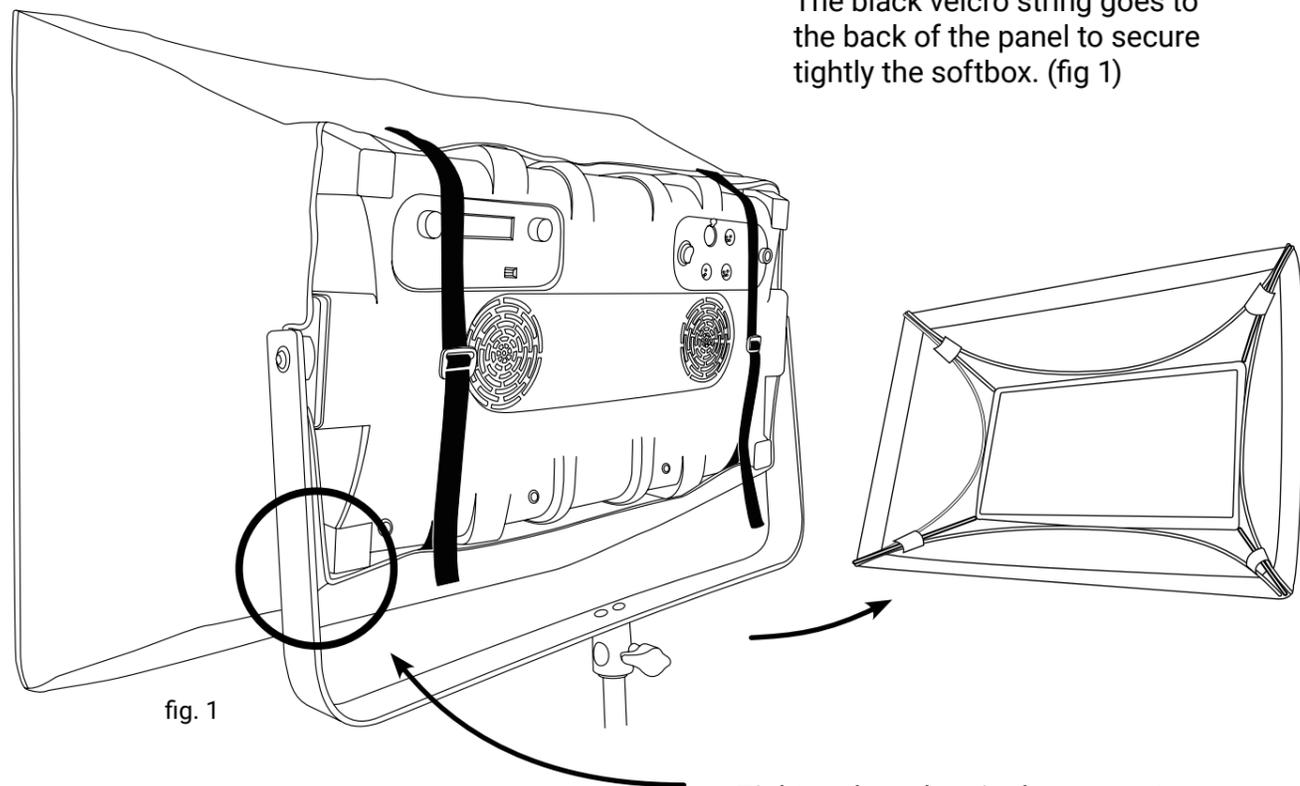


fig. 1

Tighten the velcro in the corner to close the gap between the softbox and the panel until it's secured.


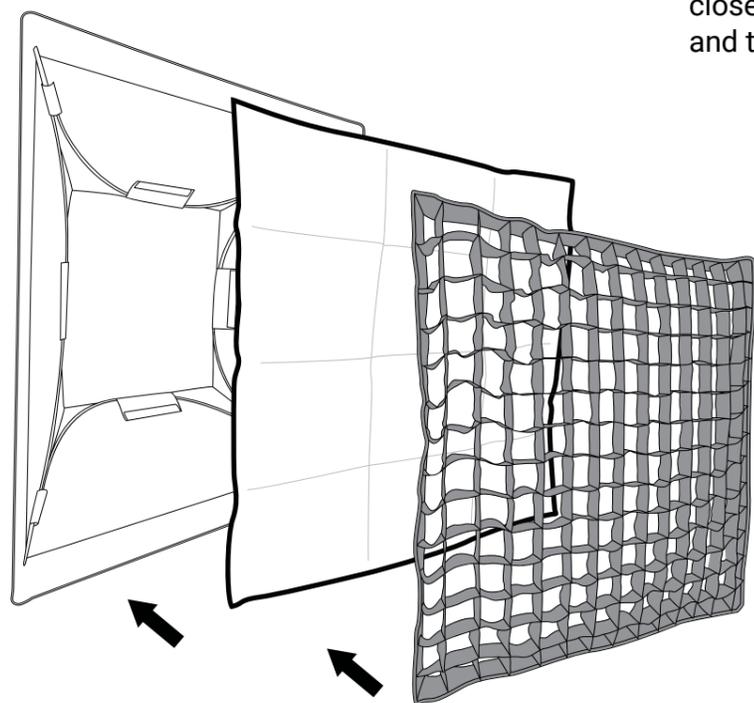


fig. 2

DayledPRO 650, DayledPRO 1000 and DayledPRO 2000 instructions

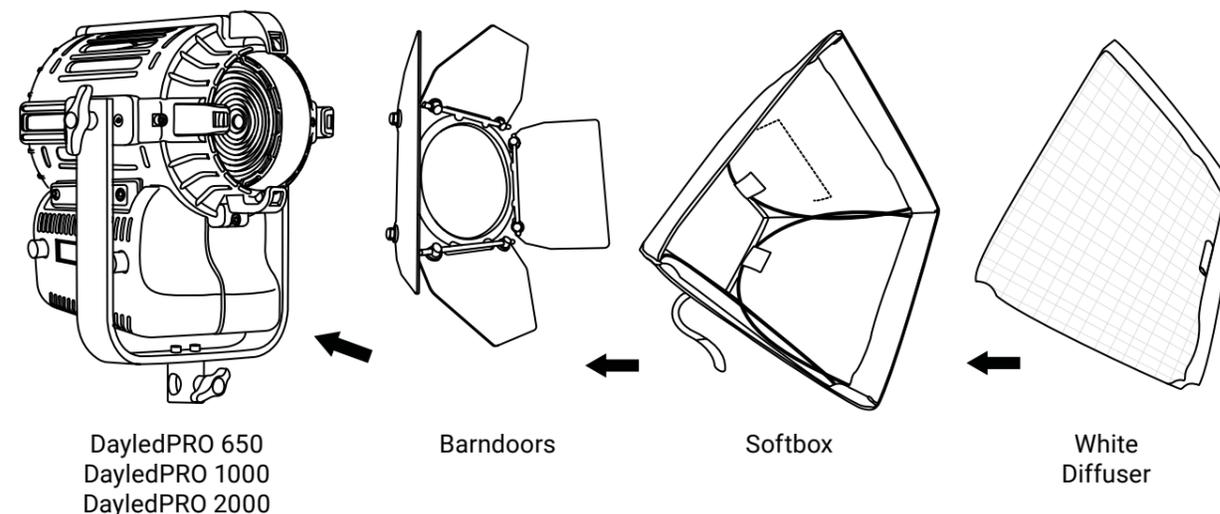

DayledPRO 650
DayledPRO 1000
DayledPRO 2000 Barndoors Softbox White Diffuser

Insert the barndoors into the velcro pockets (fig. 1)
Pass the string through the ring. (fig. 2)

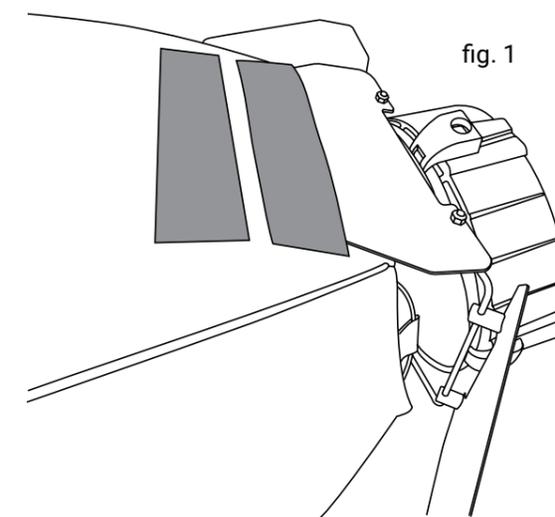


fig. 1


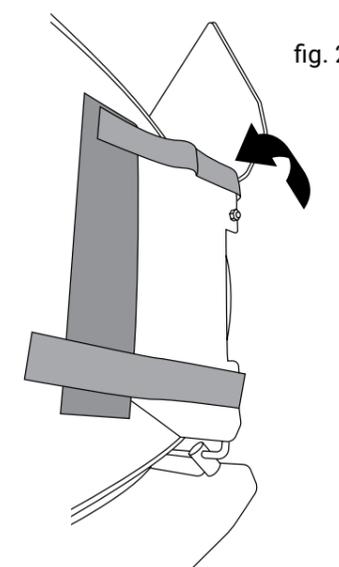


fig. 2

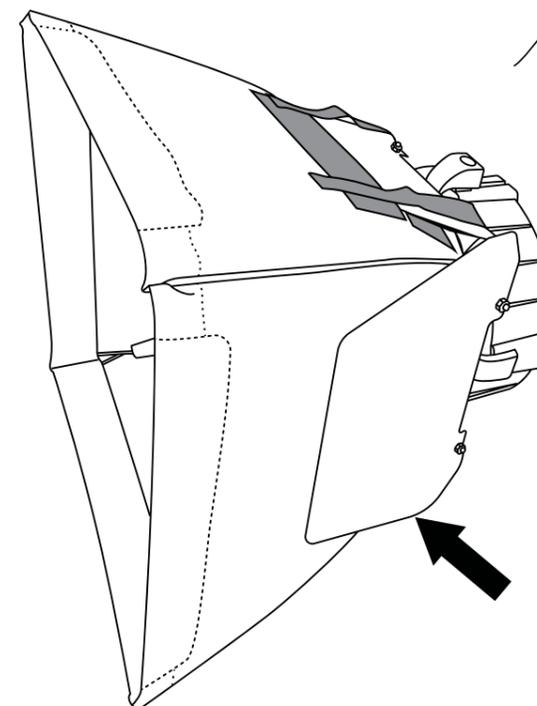

After tightening all the velcro straps position the barndoors next to the softbox. (fig. 3)

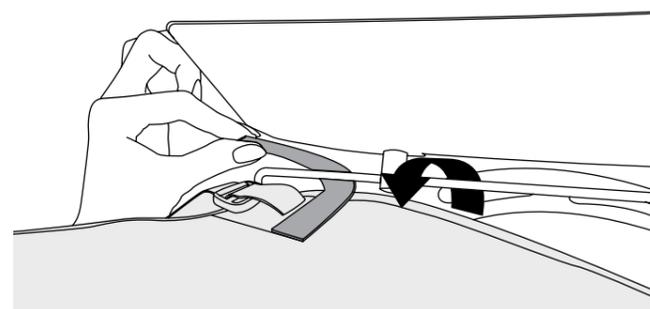
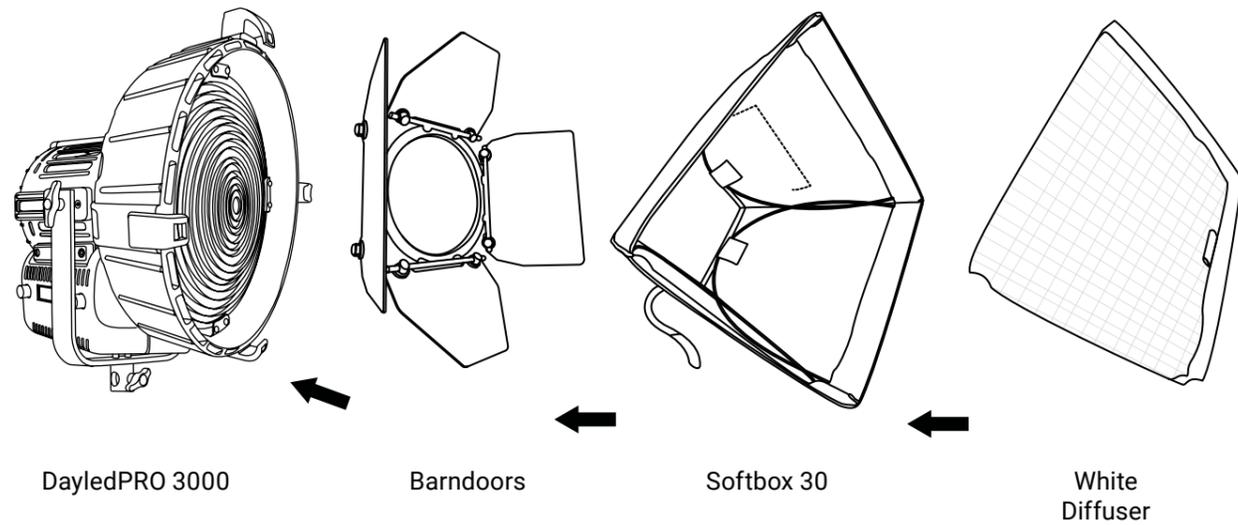


fig. 1

Pass the strings through the rod of the barndoor (fig.1) and attached them on the velcro. (fig.2)

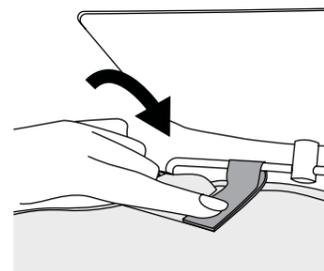


fig. 2


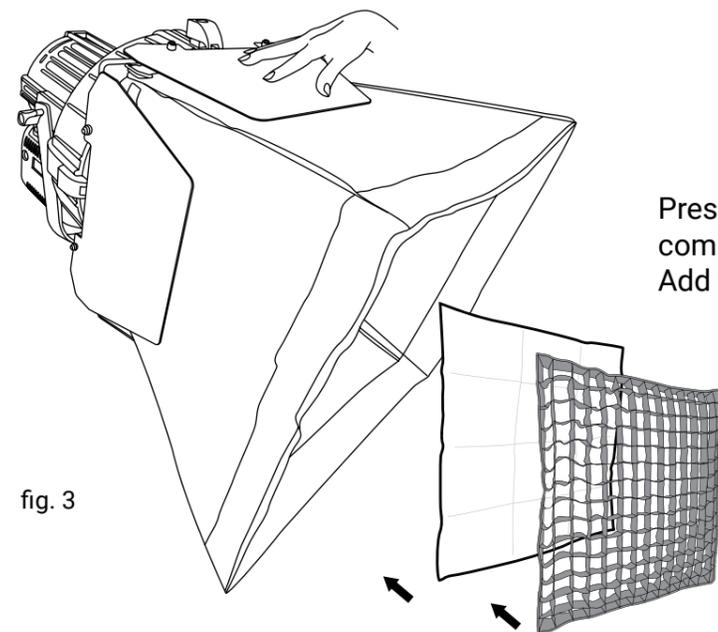


fig. 3

Press the barndoors to the softbox for a complete grip. (fig.3)
Add the white diffuser at the velcro.

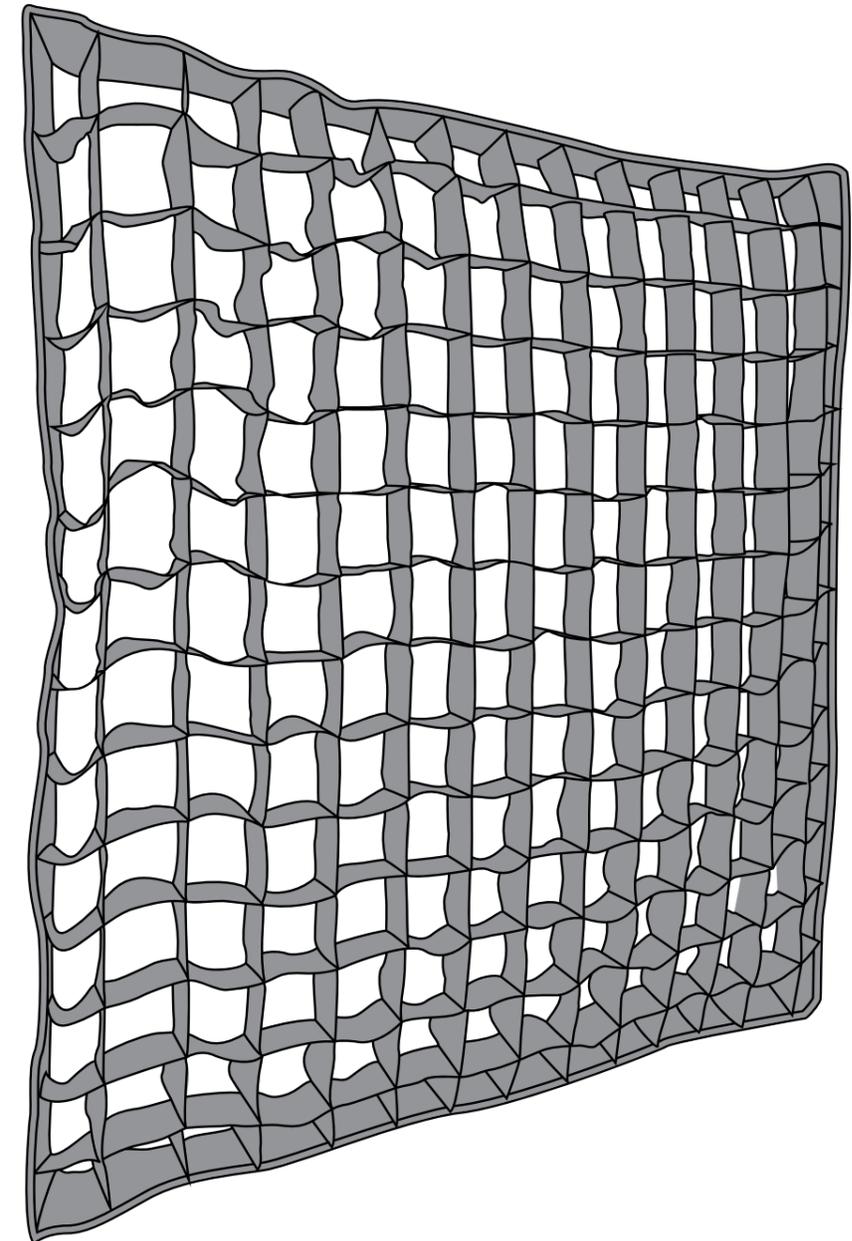

User Manual

EGG CRATE

SuperpanelPRO 30 and UltranelPRO 30 instructions

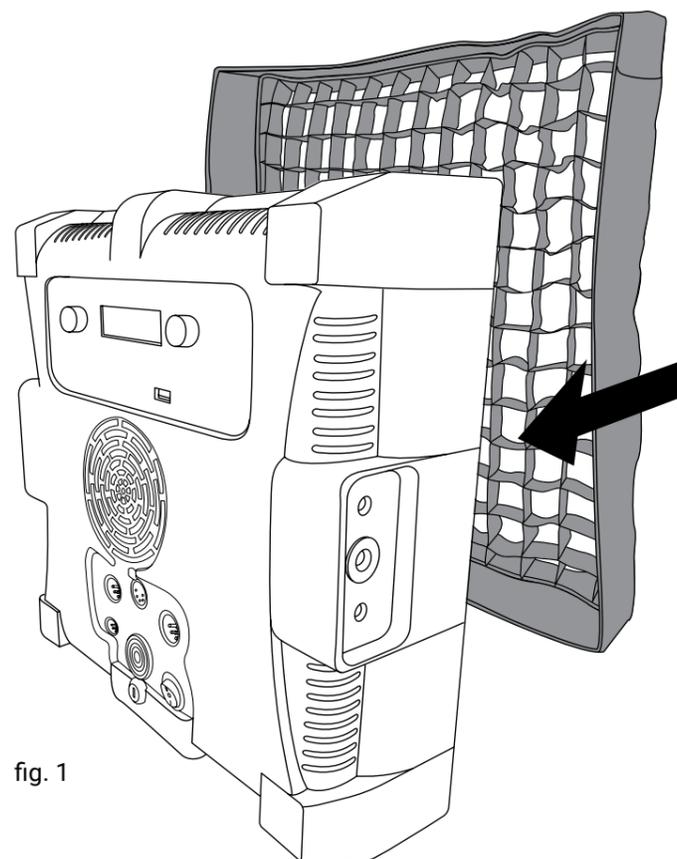


fig. 1

Attached the eggcrate to the panel.
(fig. 1)

Tighten the velcro corners for a
correct position on the panel. (fig. 2)

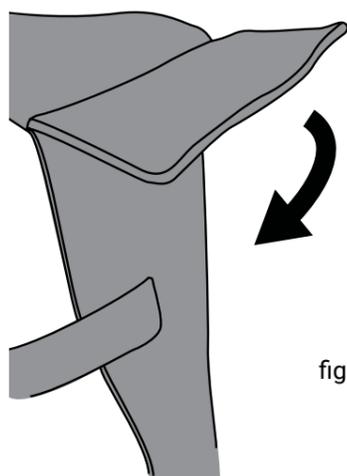


fig. 2

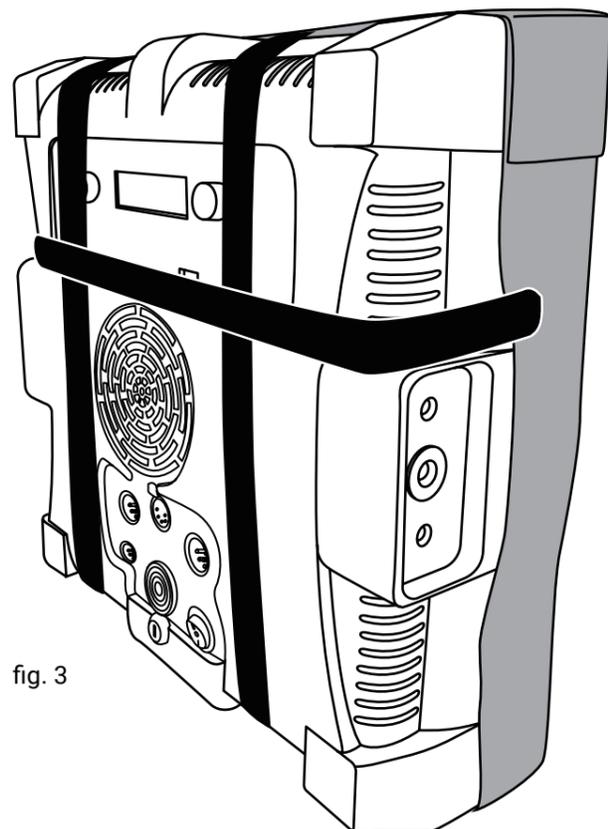


fig. 3

Pass the strings behind the panel and
tighten them with the velcro.
(fig. 3)

SuperpanelPRO 60 and UltranelPRO 60 instructions

The same procedure applies for the SuperpanelPRO 60 and the UltranelPRO 60.

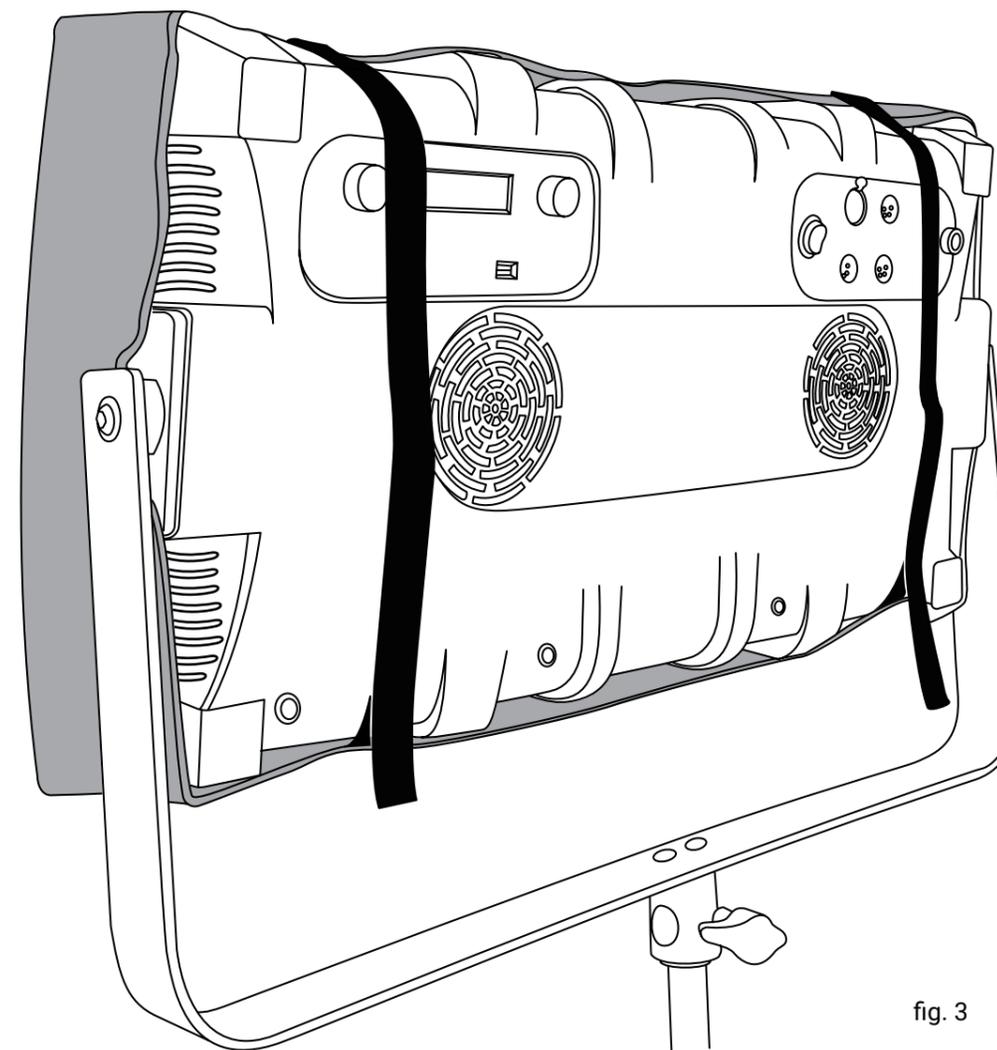


fig. 3