

---


**User Manuals**

# **Pole Operated Yoke**

## Technical Drawing

### Models:

- ULTRAPANELPRO
- SUPERPANELPRO
- ACTIONPANEL
- DAYLEDPRO
- MOVIELIGHT

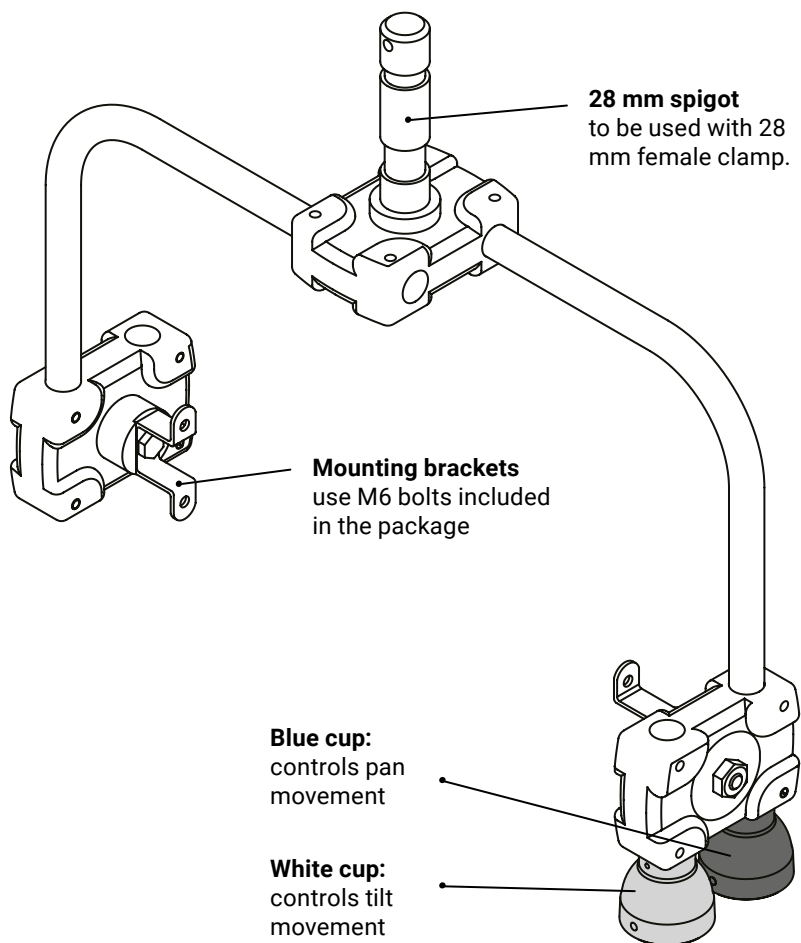


## Models:

- DAYLEDPRO
- MOVIELIGHT

### NOTE:

Lupo pole operated yoke functioning is common for all models. Yellow cup for focus movement is present only in DayledPRO and Movielight models.

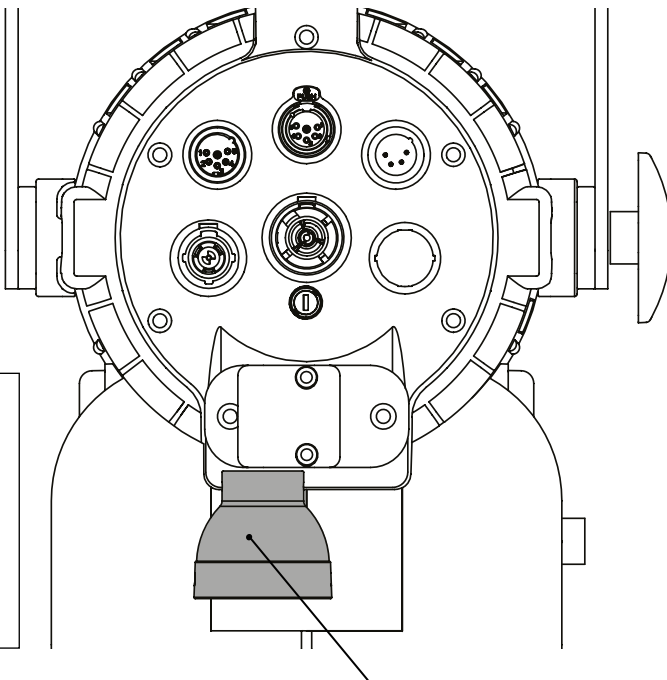

**Yellow cup:**  
controls focus  
movement

## ATTENTION

### For best use of pole operated models, please note:

- The fixture should be free to move in pan and tilt direction. If movement is blocked or restricted the pole operated yoke mechanism could break;
- When using focus movement please make sure not to use excessive force;
- Please use always safety cables;
- Do not tamper with the pole operated yoke mechanism;
- For the device movement use **ONLY** the specific cups;
- Lupo pole operated yokes are compatible only with Lupo fixtures.